1、Packing Instruction

Package items：

ITEMS	QTY
TBB Interface module	1
8P8C communication cable	1
USB communication cable	1

2、TBB Interface Module Port Instruction

- Power supplied from USB port of PC，no extra power adapter required.
- TBB Interface USB port type：USB-TypeB
- TBB Interface internet port type：RJ45

3、Installation Instruction

Operation System：Windows 10/8/7

- Device driver installation

Checking USB port of PC in good condition, Connect TBB Interface module to PC by USB communication cable (USB port on PC, Type B port on module). The device driver will be installed automatically.


- Software on PC

Check the newest version of TBB Link installed on PC. The TBB Interface module will be the communication bridge between TBB Link and the inverter.



（TBB Link icon）


4、Connection Diagram

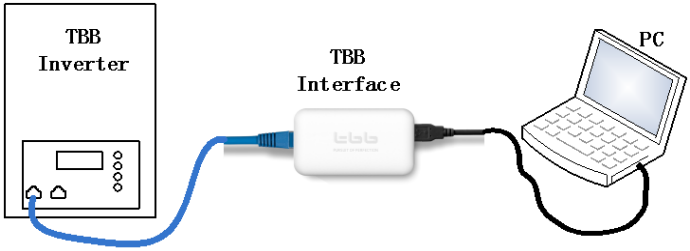

·Instruction：

Connect the TBB Interface to the inverter by 8P8Ccommunication cable(RJ45 port on the TBB Interface, ComMON port on Inverter);

Connect the TBB Interface to PC by USB communication cable (USB port on PC, Type B port on module).

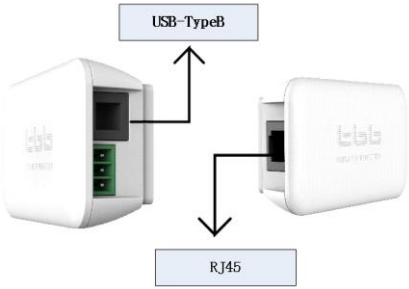


5、Manual Instruction

Before connect the TBB Interface Module, inspect the Driver, TBB Link installed well and the inverter in good condition.

·Connect the TBB Interface module by the instruction.

·Click the TBB Link on PC and select the Port-Auto detect to into the user interface (see attached); The Tx, Rx blink in normal means the TBB Interface module working well.

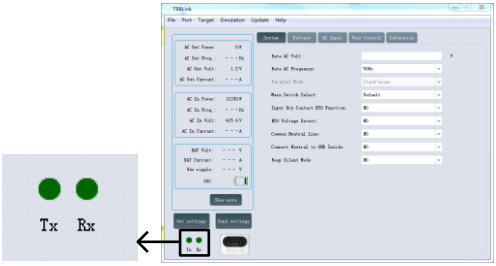

6、Faulty and Troubleshooting

Data communication in failure:

·Inspect the power from USB port of PC

·Inspect the USB cable connection

·Inspect the 8P8C communication in cable connection

·Inspect the inverter performance